

# CloseUp® System User Guide Addendum

Your Heaven® Audio | January 2018

Thank you for purchasing the Your Heaven® Audio CloseUp® System! Based on your feedback, we are constantly improving our product and some of our most recent changes haven't made it into the printed manual yet. Here's what's new:

## Hardware Improvements

On the "Getting Started Quick" card and the User Guide included with the CloseUp® System, the appearance of the Microphone **(18)** differs from the illustrations.

The 1/4" to XLR cable **(7)** has been replaced with a smaller 1/4" to XLR adapter and its location in the carrying case has been swapped with the Microphone Extension Cable **(17)**.

## New Microphone Attachment Method

The String Microphone for the CloseUp® System has been updated. Follow the instructions found here instead of those in the User Guide.

### •• Attaching the String Microphone to Your Instrument ••

Place the end of the microphone into the diamond shaped center of the f-hole **(1)**. Twist the microphone while pushing gently until it's halfway in.



**(1)**  
Place microphone  
halfway into f-hole

Thread the microphone wire underneath the instrument, from the corner of the center bout to the tailgut (2).

Slide the end of the rubber strap underneath the tailgut wire (3).

Thread the rubber piece back through the slot to lock it onto the tailgut (4).

Pull the wire through the rubber strap to set a light tension that holds the wire in place under the instrument (5).

**Note:**

You can leave the microphone attached to the instrument. It should be out of the way while playing acoustically and fit easily into the case, with out danger of damage to the instrument.



(2)  
Thread mic underneath instrument.



(3)  
Thread rubber strap through tailgut.



(4)  
Thread rubber back through slot.



(5)  
Pull wire through strap.

•• Connecting the Microphone and Extension ••

Slide the small connector from the microphone fully into the cowl on the extension cable. Make sure the parts are oriented correctly (with the ribs on the same side of each) (6).

Thread the wire hook from the cowl into the open slot on the rubber strap. The connection now has strain relief provided by the rubber strap. You should be able to tug on the extension without moving the microphone or disconnecting the wires (7).


To disconnect, simply slide the wire hook back out of the strap and pull the two connectors apart.

We are glad to help answer any questions. Please reach us at:

[support@yourheaven.net](mailto:support@yourheaven.net)

Download the most recent software at:

[yourheaven.net/closeup-downloads](http://yourheaven.net/closeup-downloads)

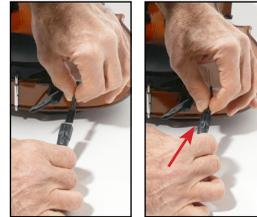

(6)  
Slide connector into cowl on extension cable.



(7)  
Thread wire hook into rubber strap.